 


Getting to Know your Appliance

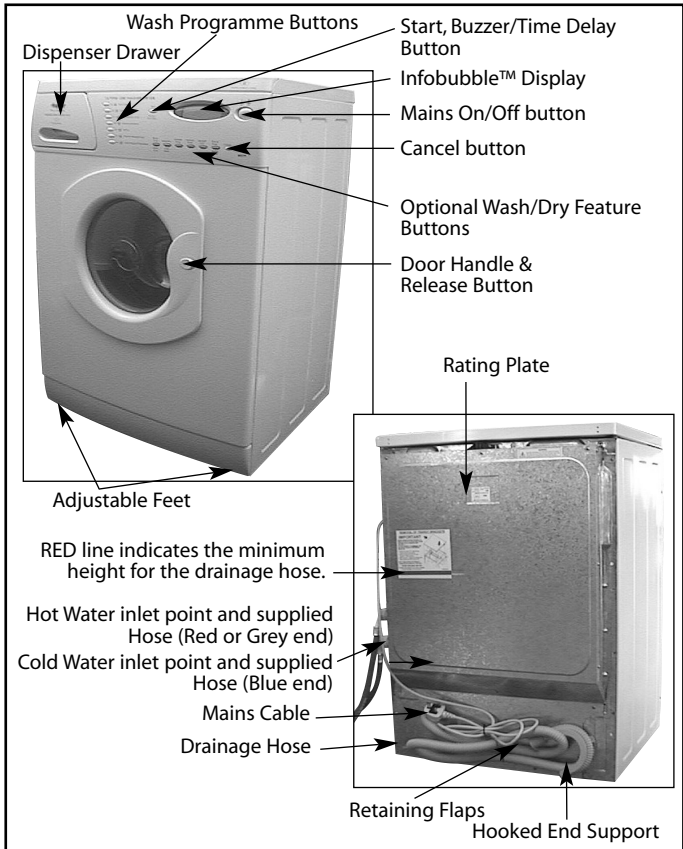

Cleaning the Exterior:

Use a damp cloth or silicon polish to clean the exterior surfaces of the appliance.

Cleaning the Door Bowl:

Clean the internal surface of the door bowl regularly with a soft cloth. A build up of soap powder and water hardness residue may result in water leaking from the door.

DO NOT clean any part of the machine with abrasive cleaners, scouring agents, acids, chlorine based bleach or metal polish as they may cause damage.

Maintenance Wash:

We recommend a maintenance wash 2 or 3 times a year, to avoid a build up of greasy deposits and water hardness residue. Simply run wash programme 'C' without any laundry in the drum, using the usual amount of detergent.

Automatic Features:

Intelligent Care:

Takes care of your laundry by monitoring your machine's performance. Prevents your machine spinning with an uneven load and reports any specific problems on the Infobubble™ display.

Temperature Sensed Fill:

Makes the best use of the existing hot water supply, saving energy, time and money.

Auto Creasecare:

Reduces creasing on any wash programme by gradually reducing the water temperature towards the end of the wash programme.

Profile Spin:

Less water, less creasing and less ironing. Gradually steps up the spin speed for the most efficient water extraction.

Pulse Spin:

Reduces wear and tear on your laundry. A long, steady spin is followed by a 30 second burst at the maximum speed for your machine, to enable safer, more efficient water extraction.

Dry Spin:

There will be a 2 minute spin about 20 minutes after the drying programme has started; this improves the drying performance.

NOTE: This feature will not operate if you have selected a combined Wash & Auto Dry Programme for synthetic fabrics.

Infobubble™ Display:

The Infobubble™ displays your selected wash programme, optional wash features selected and shows you exactly where you are in the washing cycle.

Key Contacts

After Sales Service

Over 1200 trained specialists, directly employed by us, ensure that you can have complete confidence in both the appliances and services we offer.

Repair Service and Information Desk

UK: 08709 066 066

(Open 8 to 8 Mon - Fri, 8 to 6 Sat, 10 to 4 Sun & Bank Holidays)

www.theservicecentre.co.uk

Republic of Ireland: 1850 302 200

Note: Our operators will require the Model number and Serial number.

Extended Warranties

UK: 08709 088 088

(Open 8 to 8 Mon - Sun)

www.theservicecentre.co.uk

Republic of Ireland: 1850 502 200

Genuine Parts and Accessories

UK: 08709 077 077

(Open 8-30 to 5-30 Mon - Fri & 9 to 12 Sat)

www.theservicecentre.co.uk

Republic of Ireland: (01) 842 6836

Hotpoint guarantee

"Satisfaction guaranteed or your money back"

We give you a unique 'satisfaction guaranteed' promise - **valid for 90 days** - after you have purchased your Hotpoint appliance. If there is a technical problem simply call Hotpoint Repair service or visit our web-site at

 
www.theservicecentre.co.uk and where necessary, we will arrange for an engineer to call. If the technical problem is not resolved under this guarantee, **we will replace your machine or, if you prefer, give you your money back.**

All Hotpoint appliances carry a fully inclusive 12 month parts and labour guarantee as well as free replacement parts for the first 5 years (except microwaves, selected integrated appliances and cooker hoods, which have a one year guarantee) provided that they are fitted by a Hotpoint engineer.

Guarantee terms and conditions

Your guarantee is only applicable in the United Kingdom or Republic of Ireland and is subject to the following provisions that your appliance:

- Has been installed and used correctly in accordance with this instruction booklet.
- Has been used solely for domestic purposes and is located on domestic premises (ie. not for commercial or trade use).
- Has been properly connected to a suitable electrical supply voltage as stated on the appliance rating plate.
- Has not been subject to misuse, accident, modified or repaired by anyone other than one of our own service engineers.



For pre purchase information on any other Hotpoint product, call: 08701 50 60 70 or visit: www.hotpoint.co.uk



Recycling & Disposal Information

As part of Hotpoint's continued commitment to helping the environment, Hotpoint reserves the right to use quality recycled components to keep down customer costs and minimise material wastage.

Please dispose of packaging and old appliances carefully.

To minimise risk of injury to children, remove the door, plug and cut mains cable off flush with the appliance. Dispose of these parts separately to ensure that the appliance can no longer be plugged into a mains socket, and the door cannot be locked shut.

General Domestic Appliances Limited, Morley Way, Peterborough, PE2 9JB.

PRINTED BY SIMLEX · FOUR ASHES, WOLVERHAMPTON.

After Sales Service

"No company is better positioned to offer an after sales service on a Hotpoint appliance than us - the manufacturer"

As part of our commitment to you, all Hotpoint appliances have the added benefit of a fully inclusive parts and labour guarantee for the first 12 months. In addition to this you also have the advantage of **free replacement parts for the first 5 years** when fitted by a Hotpoint engineer. When the 12 months parts and labour guarantee expires we offer the following after sales service options:

Repair Service and Information Help Desk

UK: 08709 066066

www.theservicecentre.co.uk

Republic of Ireland: 1850 302 200

Note: Our operators will require the Model number and the Serial number of your appliance.

Available 364 days a year with a fast, effective and value for money service. We have the largest white goods repair service in the UK with over 1200 of our own fully trained engineers. All repairs include a parts and labour guarantee for 12 months from the date of the repair.

If you require any information or have any questions about your appliance, our operators are on hand with help and advice. All this ensures that you will receive the best available after sales service possible.

Extended Warranties

UK: 08709 088 088

www.theservicecentre.co.uk

Republic of Ireland: 1850 502 200

Whether you have just one or a number of Hotpoint appliances in your kitchen, we offer two service cover plans to give you total peace of mind.

- Repair Protection Plan - FREE service repairs for a single Hotpoint appliance during the period of cover.
- Kitchen Cover - FREE service repairs for all your Hotpoint appliances less than 8 years old.

Genuine Parts and Accessories

UK: 08709 077 077

www.theservicecentre.co.uk

Republic of Ireland: (01) 842 6836

A wide range of genuine parts and accessories are available from our hotline or through our web site.

Genuine parts and accessories, extended warranties and service repairs are all available on our web-site at:



www.theservicecentre.co.uk

INSTRUCTIONS FOR INSTALLATION & USE

WD72, WDM73

Hotpoint recommends, for your own safety and to ensure you get the best possible results from your Washer Dryer, you read through this booklet and follow these steps thoroughly.

STEP 1 Electrical Guide

Choose a location for your washer dryer, where possible on a solid floor, with the electrical sockets and water supply taps easily accessible. Allow sufficient space: 600mm width, 600m depth and 900mm height. DO NOT install in a bath or shower room.

WARNING: This appliance must be earthed.

 


STEP 2 Installation Guide

Dispose of packaging material in a safe place and remove any labels.

Please read instructions thoroughly to ensure you understand each stage before you begin.

Remember you may be charged for a service call if a problem with your washer dryer is caused by incorrect installation or misuse.

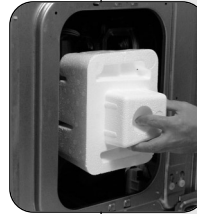

STEP 3 Dispenser Drawer

Read through this section to familiarise yourself with the different compartments within the dispenser drawer.

Hotpoint recommend the Persil range of detergent products.

 
NOTE: Always follow manufacturer's dosage recommendations.



STEP 4 Wash Guide

A wash chart is provided to help you to select your required programme.


Examples are given for the maximum washing load weights for different fabric types.

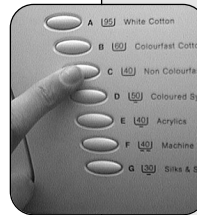

STEP 5 Using your Machine / Options Guide

All available optional wash features are explained within this section - These allow you to adjust your selected wash programme to suit your needs.

 NOTE: In addition to the temperature of the incoming water, the selection of optional wash features will affect the programme times.

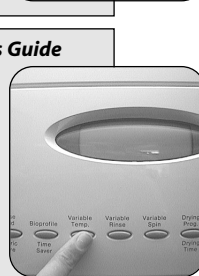

STEP 6 Wash & Dry Programme

 
A guide to drying times is provided for independent drying programmes, along with a list of items not suitable for tumble drying.

Examples given for the maximum drying load weight for different fabric types.



STEP 7 Drying Guide

A picture guide provides a clear explanation how to set a wash and auto dry programme. DO NOT overload the washer dryer.

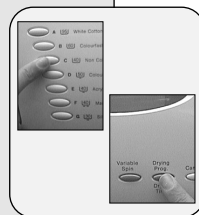

STEP 8 Troubleshooting

Please refer to the Troubleshooting section if you have any problems when using your washer dryer. There may be nothing wrong!



Read the rest of these instructions to get the best from your appliance, remember to fill in your guarantee registration.

Keep this Book in a safe place for quick reference.

 


Cleaning the Dispenser Drawer & Compartments:
It is advisable to clean the dispenser drawer regularly. Remove the drawer, see 'Changing the dispenser drawer and clean out the compartment. Dry thoroughly and relocate. push back into place.

Dispensing Liquid Detergent
Pour fabric conditioner into the compartment. We recommend that you do not exceed the maximum level indicated.

Dispensing Powder Detergent
To achieve optimum wash results we recommend that you use the detergent cup, to dispense no more than 300ml of powder.

Index:
1. Drawer latch
2. Button
3. Main wash indicator
4. Main wash compartment
5. Fresh compartment
6. Fabric conditioner compartment

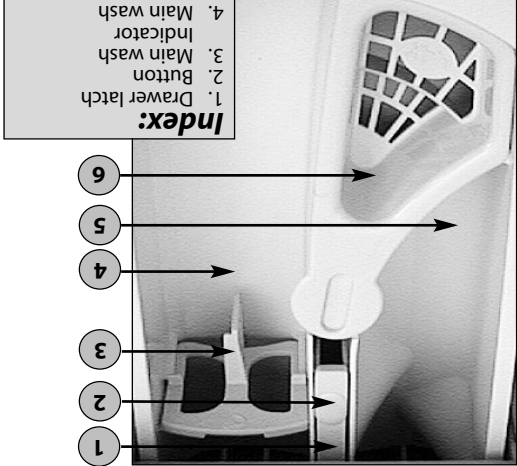

STEP 3 The Dispenser Drawer



7 READY...
TO CHECK ALL PARTS OF THE INSTALLATION AND TO THOROUGHLY CLEAN THE INSIDE OF YOUR MACHINE:
SELECT A 95° WHITE COTTON WASH PROGRAMME (refer to STEP 4), WITHOUT ANY LAUNDRY and WITHOUT ANY DETERGENT

8 DRAINAGE SYSTEM...
WHICHEVER DRAINAGE METHOD YOU USE, MAKE SURE THAT THE HOOKED END SUPPORT IS FIXED LEVEL TO, OR ABOVE THE PLUMBING INDICATOR LINE. ("see Getting to Know your Appliance")
NOTE: ALTHOUGH YOU MAY NEED TO MOVE THE HOOKED END SUPPORT ALONG THE GREY DRAINAGE HOSE, DO NOT REMOVE IT.

9 POLYSTYRENE BLOCK...
IF IT HAS NOT... REMOVE IT!
This is part of the packaging and should have come away with the polystyrene base -

10 REMOVE TWO TRANSIT FIXINGS...
IMPORTANT: brackets are fitted to prevent damage during transit and MUST be removed before use...
Failure to do so may cause damage to your machine!
Remove and retain 2 screws from the back of the workshop lid, lift, and pull towards you.
Remove 4 screws and the rear transit bracket - retain.
Remove 3 screws and front transit bracket - retain.
Replace the workshop lid using the 2 original screws.
Side and push workshop lid back into position, ensuring front edge is correctly located into the console.

Installation



6 CONNECT TO THE POWER SUPPLY...
NOTE: Hotpoint recommend extension leads are not used.
Move your machine into position, take care not to trap or kink the hoses.
EASILY ACCESSIBLE. SWITCH ON

7 READY...
TO CHECK ALL PARTS OF THE INSTALLATION AND TO THOROUGHLY CLEAN THE INSIDE OF YOUR MACHINE:
SELECT A 95° WHITE COTTON WASH PROGRAMME (refer to STEP 4), WITHOUT ANY LAUNDRY and WITHOUT ANY DETERGENT

8 DRAINAGE SYSTEM...
WHICHEVER DRAINAGE METHOD YOU USE, MAKE SURE THAT THE HOOKED END SUPPORT IS FIXED LEVEL TO, OR ABOVE THE PLUMBING INDICATOR LINE. ("see Getting to Know your Appliance")
NOTE: ALTHOUGH YOU MAY NEED TO MOVE THE HOOKED END SUPPORT ALONG THE GREY DRAINAGE HOSE, DO NOT REMOVE IT.

9 POLYSTYRENE BLOCK...
IF IT HAS NOT... REMOVE IT!
This is part of the packaging and should have come away with the polystyrene base -

Installation



6 CONNECT TO THE POWER SUPPLY...
NOTE: Hotpoint recommend extension leads are not used.
Move your machine into position, take care not to trap or kink the hoses.
EASILY ACCESSIBLE. SWITCH ON

7 READY...
TO CHECK ALL PARTS OF THE INSTALLATION AND TO THOROUGHLY CLEAN THE INSIDE OF YOUR MACHINE:
SELECT A 95° WHITE COTTON WASH PROGRAMME (refer to STEP 4), WITHOUT ANY LAUNDRY and WITHOUT ANY DETERGENT

8 DRAINAGE SYSTEM...
WHICHEVER DRAINAGE METHOD YOU USE, MAKE SURE THAT THE HOOKED END SUPPORT IS FIXED LEVEL TO, OR ABOVE THE PLUMBING INDICATOR LINE. ("see Getting to Know your Appliance")
NOTE: ALTHOUGH YOU MAY NEED TO MOVE THE HOOKED END SUPPORT ALONG THE GREY DRAINAGE HOSE, DO NOT REMOVE IT.

9 POLYSTYRENE BLOCK...
IF IT HAS NOT... REMOVE IT!
This is part of the packaging and should have come away with the polystyrene base -

Installation



6 CONNECT TO THE POWER SUPPLY...
NOTE: Hotpoint recommend extension leads are not used.
Move your machine into position, take care not to trap or kink the hoses.
EASILY ACCESSIBLE. SWITCH ON

7 READY...
TO CHECK ALL PARTS OF THE INSTALLATION AND TO THOROUGHLY CLEAN THE INSIDE OF YOUR MACHINE:
SELECT A 95° WHITE COTTON WASH PROGRAMME (refer to STEP 4), WITHOUT ANY LAUNDRY and WITHOUT ANY DETERGENT

8 DRAINAGE SYSTEM...
WHICHEVER DRAINAGE METHOD YOU USE, MAKE SURE THAT THE HOOKED END SUPPORT IS FIXED LEVEL TO, OR ABOVE THE PLUMBING INDICATOR LINE. ("see Getting to Know your Appliance")
NOTE: ALTHOUGH YOU MAY NEED TO MOVE THE HOOKED END SUPPORT ALONG THE GREY DRAINAGE HOSE, DO NOT REMOVE IT.

9 POLYSTYRENE BLOCK...
IF IT HAS NOT... REMOVE IT!
This is part of the packaging and should have come away with the polystyrene base -

Installation

STEP 4

Choosing a Washing Programme

IMPORTANT INFORMATION: The temperature of the incoming water supply and selection of any Optional Wash Feature will affect the programme times.

ITCL	Codes	Fabric	Temp. °C	Full Load	Programme Time (mins)	Approx. Max Spin Speed depending on model
A	95/	White cotton & linen without special finishes	95	5kg	120 - 140	1200rpm
B	60/	Colourfast cotton, linen or viscose without special finishes	60	5kg	150 - 170	1200rpm
C	40/	Non-colourfast cotton, linen & viscose	40	5kg	70 - 80	1200rpm
D	50/	Coloured nylon, polyester, acrylic/cotton mixtures, cotton or viscose with special finishes (eg. drip dry), coloured polyester/cotton mixtures	50	3kg	60 - 70	900rpm
E	40/	Acrylics, acetates & tri-acetate blends of these fabrics with wool, polyester/wool blends	40	3kg	50 - 60	900rpm
F	40/	Woolen blankets, wool mixtures with cotton, rayon or silk. Shrink resistant machine washable wool	40	2.7kg 1.4kg	55 - 65 40 - 50	900rpm 900rpm
G	30/	Silk & printed acetate fabrics with colours not fast at 40° Refresh programmes	30 warm	1.4kg 0.9kg	35 - 40 30 - 35	900rpm 900rpm

For gentle wash, rinse & spin options see STEP7.

Selecting a Prewash

For heavily soiled loads, press and hold the required wash programme button until a second beep is heard, the Infobubble™ will display 'Prewash' and U.

To cancel, press the wash programme button a third time and a beep will be heard.

 
Button Selection:

To select, press button.
Press again to cancel.

STEP 6

Choosing a Drying Programme

Items Not Suitable for Tumble Drying:

- Garments with the ITCL code  DO NOT TUMBLE DRY.
- Large bulky items eg. quilts, bedspreads, pillows etc., expand when dry, preventing air flow through the appliance.
- Items containing plastic film, foam rubber or rubber like materials eg. pillows, cushions, PVC rainwear or inflammable articles which contain inflammable substances eg. towels contaminated with hair lacquer
- Fibreglass (eg. some types of curtains).
- Items which have been dry cleaned.


IMPORTANT INFORMATION: A 10 minute 'Cool Tumble' phase at the end of each drying cycle allows fabrics to gently cool down, minimising creasing.


All fabrics contain a little natural moisture even when 'dry', this should not be lost if the clothes are to remain soft and fluffy. If clothes are subjected to extreme drying the tend to wrinkle and consequently need more ironing than usual. As clothes feel damper when warm, allow for this when removing items before the 'Cool Tumble' phase is complete.


This machine incorporates a 'Dry Spin' feature, see Automatic Features.


NOTE: After you have dried a particularly 'fluffy' load, or if you have used the appliance as a dryer only, remove the load then run a rinse and spin cycle to flush fluff out of the pipes. This appliance does not have a filter for you to clean.


Independent Drying Programme








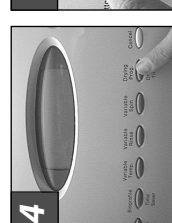

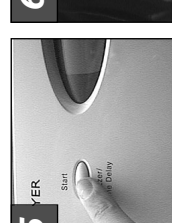

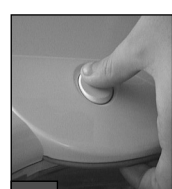

WARNINGS:

- If your appliance is not permanently plumbed in, turn on the cold water supply to the appliance and hook the drain hose over the sink to enable the condensing action to work.
- The dryer is intended for use only where water is used for the cleaning process.
- Be careful not to touch the drum at the top as this area gets hot during drying process.
- On no account should liquid fabric conditioner be added during the drying process.
- Misuse of the dryer may create a fire hazard.


 




STEP 5

Optional Wash Features

Cancel Button


To start the selection again, press and hold the cancel button for a few seconds, all settings displayed will disappear and the Infobubble™ will display 'Select Programme'.


NOTE: If pressed when setting 'Time Delay' or when time delay is active, time delay is cancelled but the selected wash programme and optional wash features will remain, the Infobubble™ will display 'Press start to proceed with the programme'.


Rinse Hold / Fabric Care		
● Not available with Programme F:		
Press Button	Action	Infobubble™ Display
x1	- Minimises creasing of silk by suspending wash load in final rinse water.	Rinse Hold 
Note: To spin, press the Rinse Hold button again (the Infobubble™ display will remind you to do this, or select the buzzer).		
x2	- Protects delicacies with a gentle wash, automatic rinse hold and 800rpm spin.	Fabric Care 
x3	Cancel	
Bioprofile / Time Saver		
Press Button	Action	Infobubble™ Display
x1	- Increases water temperature at stages to ensure maximum wash performance from your biological detergent.	Bioprofile 
x2	- Saves up to 25 minutes on lightly soiled items by reducing the wash & spin time of any programme.	Time Saver 
x3	- Bioprofile & Time Saver together.	Boo + Time Saver 
x4	Cancel	
Variable Temperature		
Press Button	Action	Infobubble™ Display
x1 & Hold	Reduce programmed temperature in 5°C intervals to a minimum of 30°C	Var. Temp 
x2	Cancel	


STEP 7


Wash & Auto Dry Programme

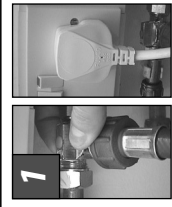

 




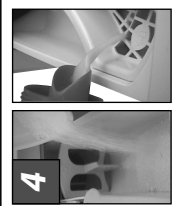





WARNINGS:

- Do not overload the appliance it may damage laundry and reduce the quality of the wash.
- Do not attempt to open the door when water is visible in the drum or if the  symbol is displayed in the Infobubble™.
- Do not use a dosing ball to dispense detergent when using a wash and auto dry programme.

1-2 minutes after completion of the wash programme the  symbol will appear in the Infobubble™ and the door can be opened. Switch 'OFF' after use.

Press 'START', the door will lock and the  symbol will appear in the Infobubble™ and the door can be opened. Switch 'OFF' after use.

Select optional wash & dry features (STEP 5). you will hear a beep and the Infobubble™ will display the programme information.

Select optional wash programme (STEP 4), you will hear a beep and the Infobubble™ will display the programme information.


Gentle Wash, Rinse & Spin Options for Programme G

Press Button	Infobubble™ Display	Description	Options Available
Once	Silk 30°C	Gentle Wash for Silks.	Rinse Hold, Fabric Care, Variable Rinse, Variable Spin & Time Saver.
x2	Refresh 40°C	A very quick light wash for freshening up.	No options.
x3	Rinse & Super Spin 1200	Rinse for hand washed cottons or as an extra rinse for programme F.	Variable Rinse.
x4	Wool Rinses & Spin 1000	Rinse for hand washed woollens or as an extra rinse for programme F.	Variable Rinse.


x5	Rinses & Slow Rinse Spin 800	Variable Rinse for hand washed cottons or as an extra rinse for programmes D,E & G.
x6	Super Spin 1200	Spin for hand washed cottons or as an extra spin for programmes A,B & C.
x7	Wool Spin 1000	Spin for hand washed woollens or as an extra spin for programme F.
x8	Slow Spin 800	Spin for hand washed delicates or as an extra spin for programmes D,E & G.
x9	NOTE: Returns Infobubble™ display to Silks 30°C	

STEP 8


Troubleshooting - More Troubleshooting information and general product advice can be found on our website, visit: www.theservicecentre.co.uk/help




- It is strongly recommend that you do not wash underwear in this machine. Should the wires become detached it could cause damage to your clothes and the machine. If the washcare label states that the bra is machine washable, then we advise placing it in a sealed plastic case or a bag and wash separately. **You will be charged for a service call resulting from a detached bra wire.**
- Do not use the machine if the item to be washed does not have a wash label.

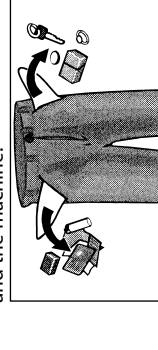


- Pre-treat awkward stains with washable treatments.
- Do not wash any items that have previously been treated with solvents.
- Close zips, fasten belts, tie strings and close press studs to prevent snagging.
- Empty all objects from pockets as they may damage the clothes and the machine.

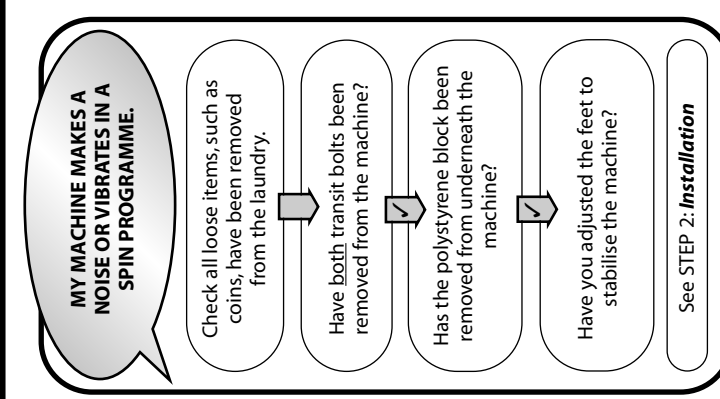


- Check all loose items, such as coins, have been removed from the laundry.
- Have both transit bolts been removed from the machine?
- Has the polystyrene block been removed from underneath the machine?
- Have you adjusted the feet to stabilise the machine?
- See STEP 2: **Installation**

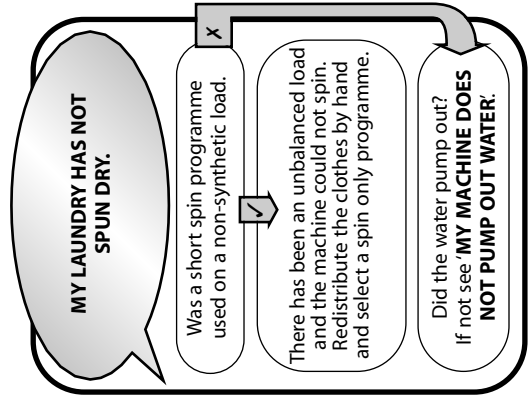


- Was a short spin programme used on a non-synthetic load.
- There has been an unbalanced load and the machine could not spin, remove the clothes by hand and select a spin only programme.
- Did the water pump out?
- If not see **MY MACHINE DOES NOT PUMP OUT WATER**.

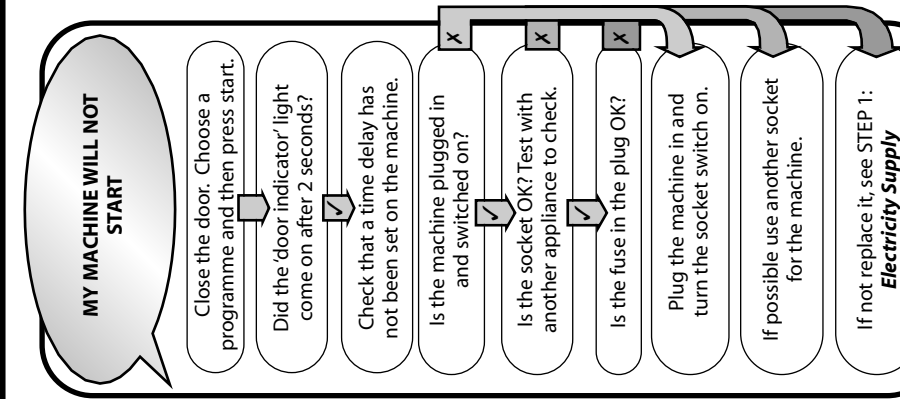


- Close the door. Choose a programme and then press start.
- Did the 'door indicator' light come on after 2 seconds?
- Check that a time delay has not been set on the machine.
- Is the machine plugged in and switched on?
- Is the socket OK? Test with another appliance to check.
- Is the fuse in the plug OK?
- Plug the machine in and turn the socket switch on.
- If possible use another socket for the machine.
- If not replace it, see STEP 1: **Electricity Supply**

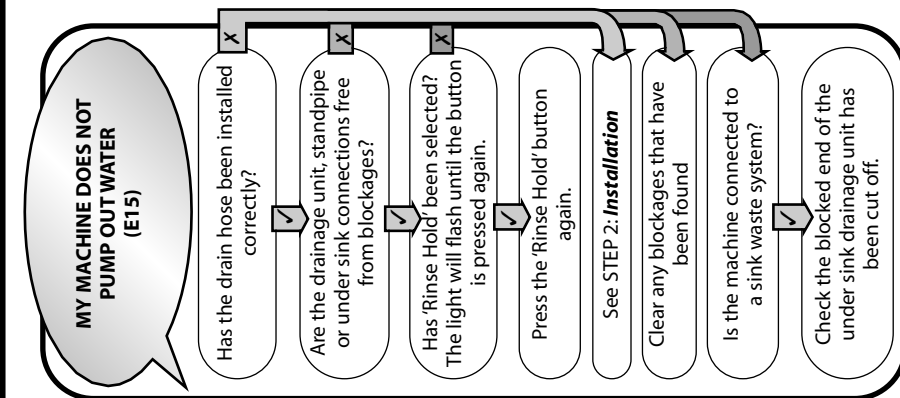


- Has the drain hose been installed correctly?
- Are the drainage unit, standpipe or under sink connections free from blockages?
- Has 'Rinse Hold' been selected? The light will flash until the button is pressed again.
- Press the 'Rinse Hold' button again.
- See STEP 2: **Installation**
- Clear any blockages that have been found
- Is the machine connected to a sink waste system?
- Check the blocked end of the under sink drainage unit has been cut off.

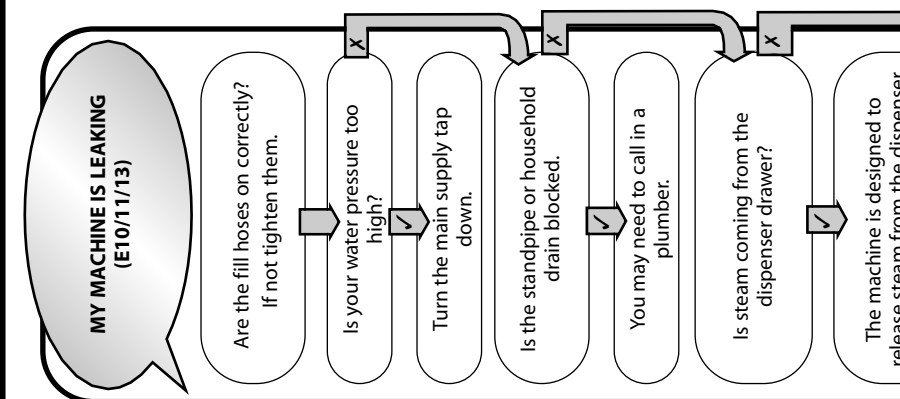


- Are the fill hoses on correctly? If not tighten them.
- Is your water pressure too high?
- Turn the main supply tap down.
- Is the standpipe or household drain blocked.
- You may need to call in a plumber.
- Is steam coming from the dispenser drawer?
- The machine is designed to release steam from the dispenser drawer during hot washes.
- Check the feet have been levelled.

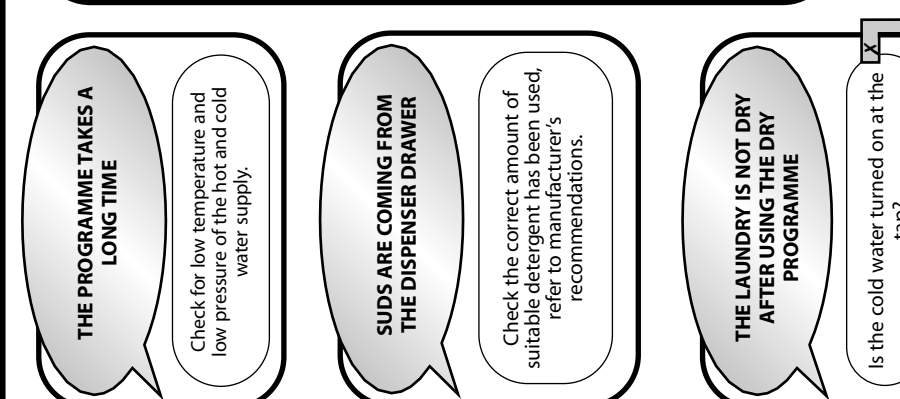


- Check for low temperature and low pressure of the hot and cold water supply.

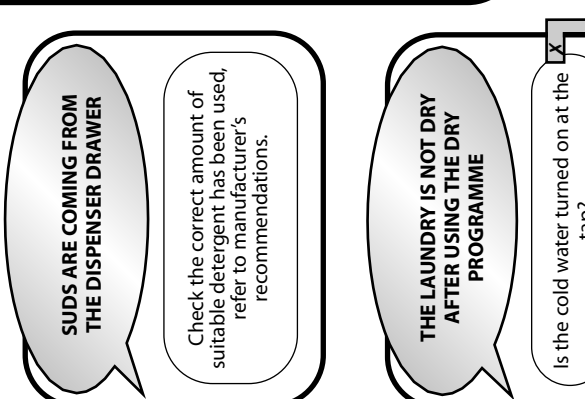

- Check the correct amount of suitable detergent has been used, refer to manufacturer's recommendations.

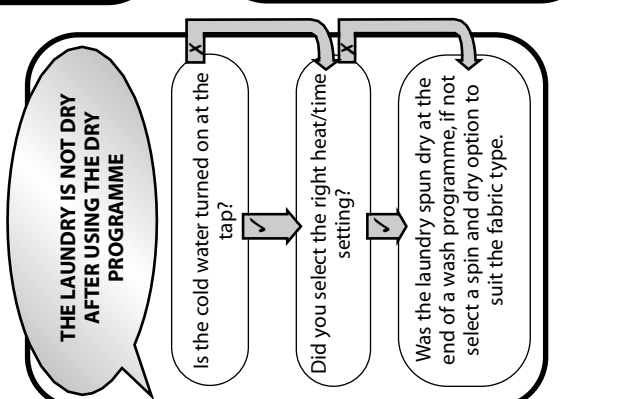

- Is the cold water turned on at the tap?
- Did you select the right heat/time setting?
- Was the laundry spun dry at the end of a wash programme. If not select a spin and dry option to suit the fabric type.

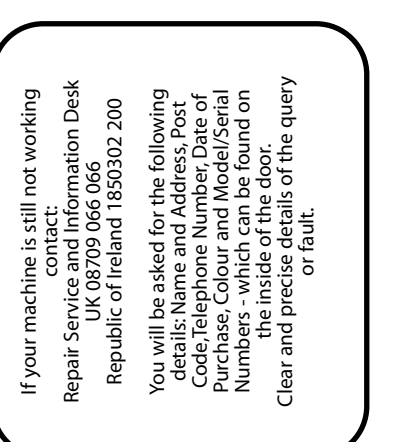

- If your machine is still not working contact:
Repair Service and Information Desk
UK 08709 066 066
Republic of Ireland 189302 200
You will be asked for the following details: Name and Address, Post Code, Telephone Number, Date of Purchase, Colour and Model/Serial Numbers - which can be found on the inside of the door.
Clear and precise details of the query or fault.

Remember, you will be charged for a service call for problems caused by incorrect installation, non-removal of transit bolts or packaging, leaks from household pipework, loose or blocked fill and drain hoses. Washing items that DO NOT have a wash label or washing items that are not intended as machine washable and NOT emptying contents from pockets may cause pump or drain blockages, or may damage components within the machine.